


Installation Guide For Mechanical Splice

Our Mechanical Splice is suitable for 3.1*2.0mm FTTH Drop Cable, and also be suitable For Indoor Cable 3.0mm/2.0mm

- 1st Step: Open the cover,take out splicer
- 2nd Step: The size of cover stripping

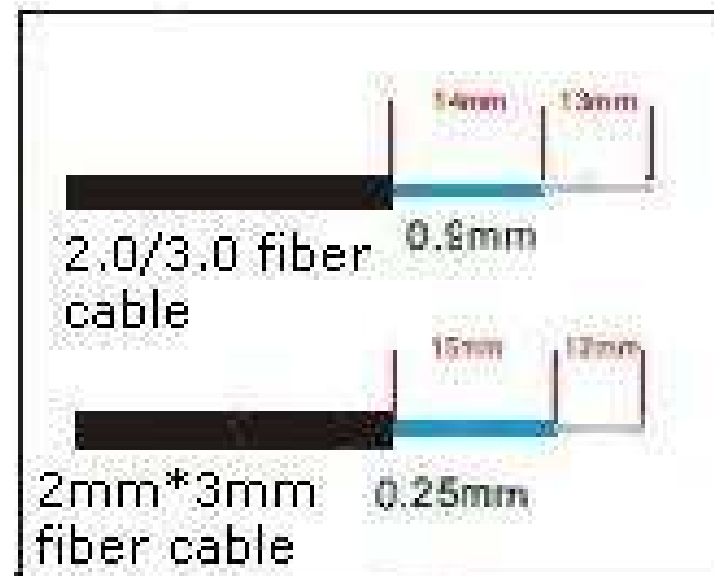

Installation Guide For Mechanical Splice

Our Mechanical Splice is suitable for 3.1*2.0mm FTTH Drop Cable, and also be suitable For Indoor Cable 3.0mm/2.0mm

- 3rd Step: Put the fiber after cutting through the screw cap.
- 4th Step: Put the fiber through the splicer



Installation Guide For Mechanical Splice

Our Mechanical Splice is suitable for 3.1*2.0mm FTTH Drop Cable, and also be suitable For Indoor Cable 3.0mm/2.0mm

- 5th Step: Put the other fiber through the splicer from the other side.
- 6th Step: Put the fiber optic cable after connected with splicer into the slot of under cover.



Installation Guide For Mechanical Splice

Our Mechanical Splice is suitable for 3.1*2.0mm FTTH Drop Cable, and also be suitable For Indoor Cable 3.0mm/2.0mm

- 7th Step: Put on the upper cover,screw on the screw caps
- 8th Step: Installation finished

